DBT Soft Close Drawer


FITTING INSTRUCTIONS


Special Features


- Length 270, 350, 400, 450, 500.
- Drawer sides come in various heights:
 - 1. 95mm high (installation space needed in unit min 95mm hight)
 - 2. 180mm high(installation space needed in unit min 180mm hight)
 - 3. 224mm high (installation space needed in unit min 224mm hight)
- For the Internal drawer only: they have 2x different heights with sides:
 - 1. 110mm high front using 95mm high sides
 - 2. 224mm high front using 95mm high sides + acrylic + rail
- Hidden full pull-out silencing sliding skid can bear 35Kg and enjoys excellent stability and quiet and smooth sliding performance.
- Quick installation and dismantle


•

Basic	Drawer Internal	Minimum
Dimension	Usable Depth	Installation
		Depth
270mm	244mm	270mm
350mm	324mm	350mm
400mm	374mm	400mm
450mm	424mm	450mm
500mm	474mm	500mm

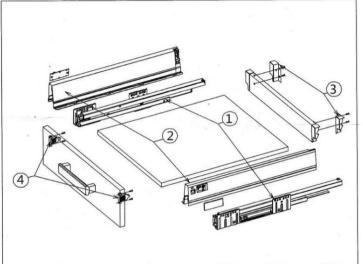

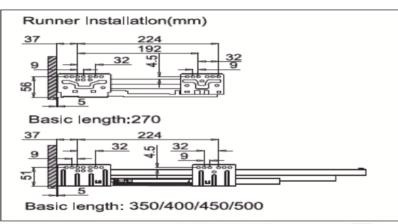























A) 95MM HIGH / Internal kitchen drawer box 110mm High front

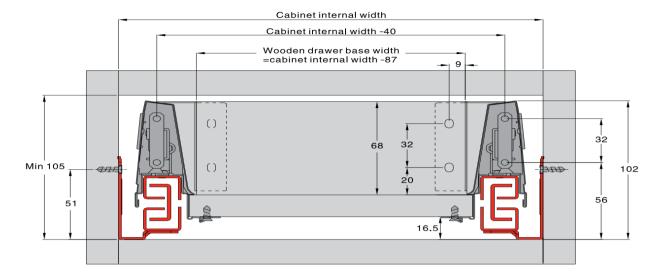


B) 180MM HIGH / Internal kitchen drawer box 224mm High front

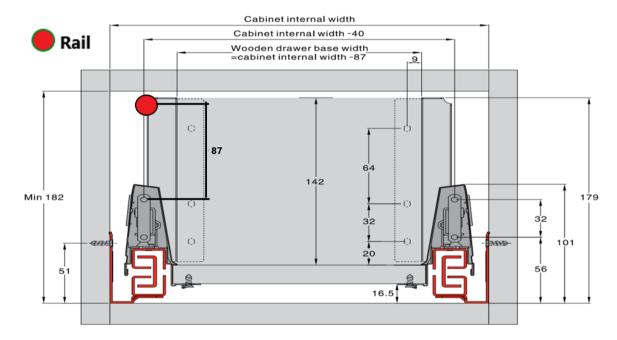



C) 224mm High

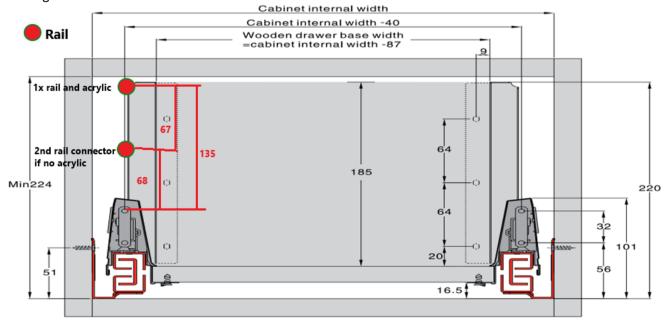

Drawer assembly

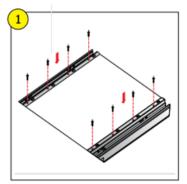

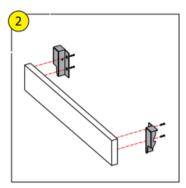

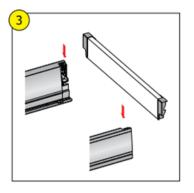




once back connector is attached to sides place drawer back between connectors and attach by screw holes provided marked ** on the connectors. (different height drawers have different holes this is just a guide)




leaver to release the back connectors from the sides


- 1) Slide back bracket into the plastic section on the drawer sides.
- 2) Once you have placed the back bracket in place it should be sitting on the drawer base and clicked into place.
- 3) Screw the back backet to back drawer pannel.
- 4) To release the back bracket please see circled above the leaver to push and pull bracket out of place.


Fitting gallery rails

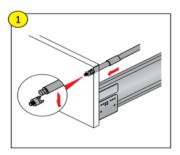

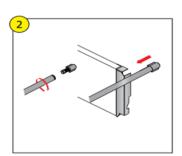

Fitting acrylic sides

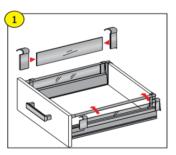

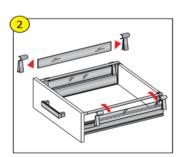


180MM HIGH + 224MM HIGH WITH RAIL / ACRYLIC INFOMATION

Single Rail

Single Rail Pan requires 'Clip A' (pre installed to rail)

Double Rail

Double Rail Pan requires 'Clip A' & 'Clip B' (Unscrew clip A from the rail and screw Clip B to the rail)

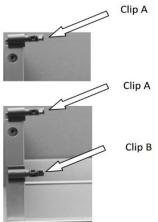

Acrylic Sides


Acrylic holders clip onto the acrylic sheets(remove protective cover from acrylic before assembly)




Acrylic connectors for 180mm high for 224mm high

Fixing to Drawer Fascia


Slide back the plastic cover from rail,
Remove end fixing cap, and fix to
drawer fascia, secure rail into end fixing
cap and slide plastic cover to secure

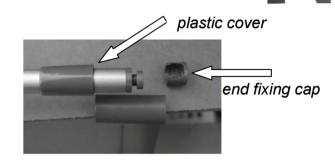


Front Panel Height Adjustment:+/- 2mm

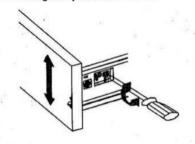

Front Panel side adjustment: Right 1mm

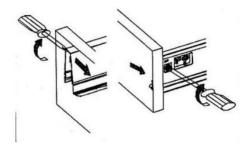

Front Panel side adjustment: Left 1mm

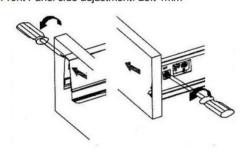



Under the little latch there is a X place crosshead screwdriver into the X turn clockwise or anti clockwise to release/attach front fixing bracket to sides


turn with screwdriver to ajust drawer front

To tighten bracket into place




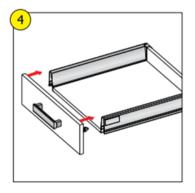

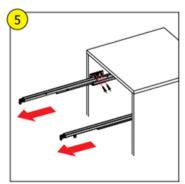

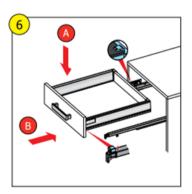

- Place drawer on to slides (A)
- Close drawer shut to engage (B)

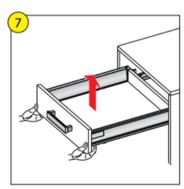

Removing the drawer

Internal Drawers Info




110mm High (95mmm High Drawer)



224mm High (180mm High Drawer with Acrylic + Rail



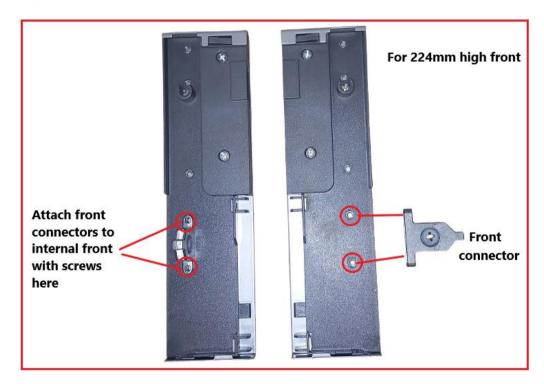

Once the drawer is assembled click internal front into drawer sides. Please see page 4 for help if needed.



 $^{f eta}$ Packing blocks will only be with orders where unit has

hinges. Blocks will come in a pair 2x left (L) or 2x right (R). Blocks are screwed to the unit before screwing runners to the unit, where then runners will be screwed to packers.